

BIONICLE



POHATU  NUVA




8568



1

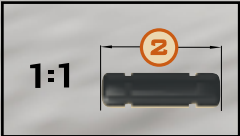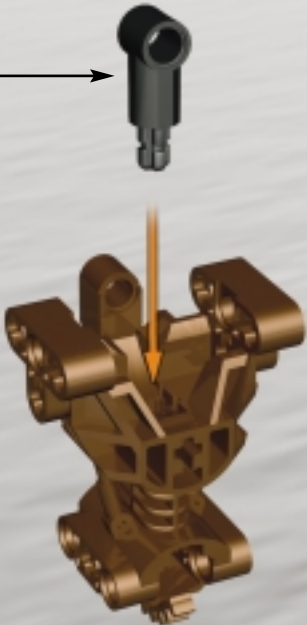


2

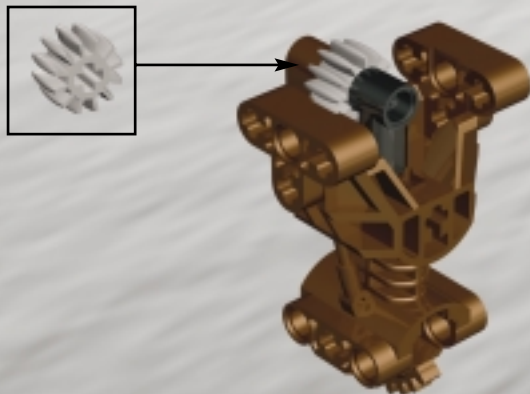


3

1:1


6

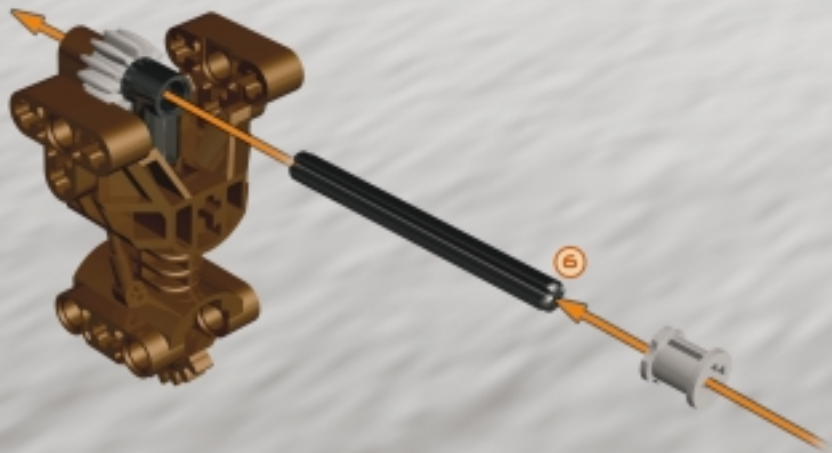


4

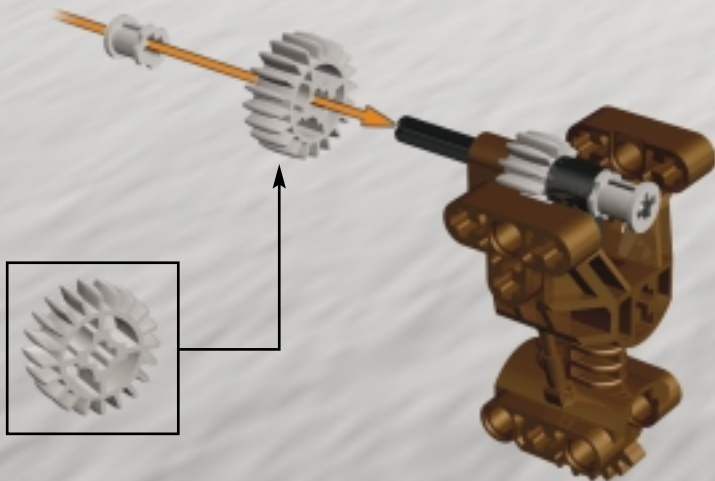

5

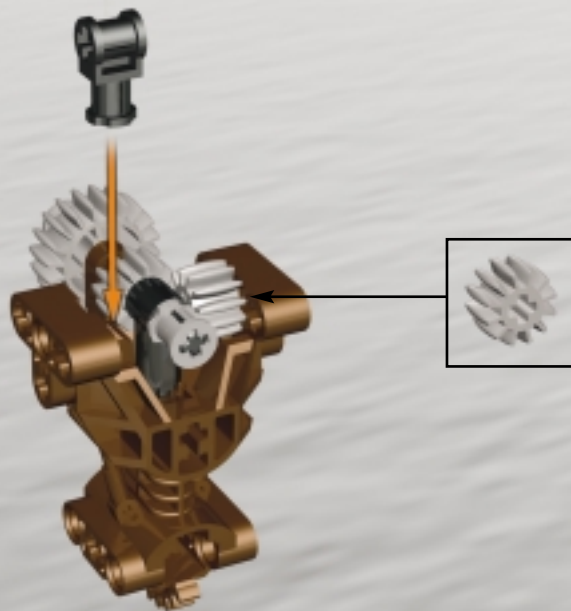


6

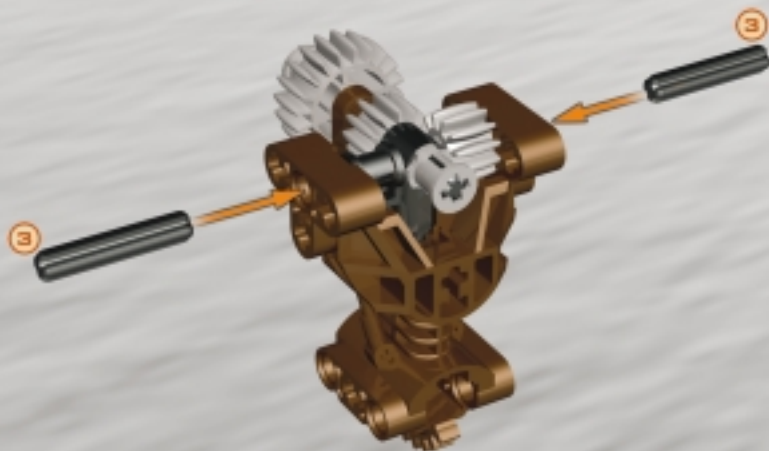


1:1



7

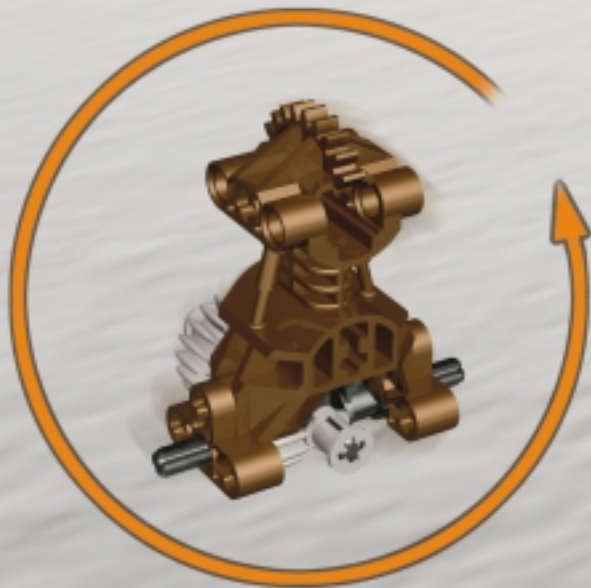


8

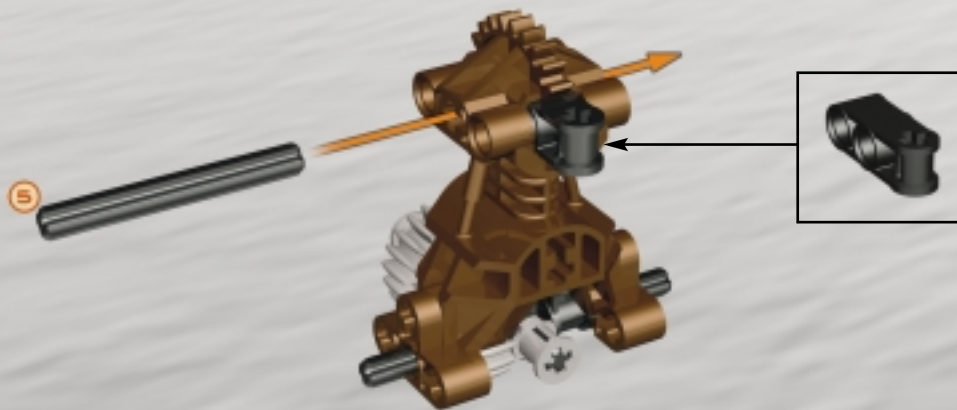


1:1


5


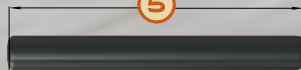


9

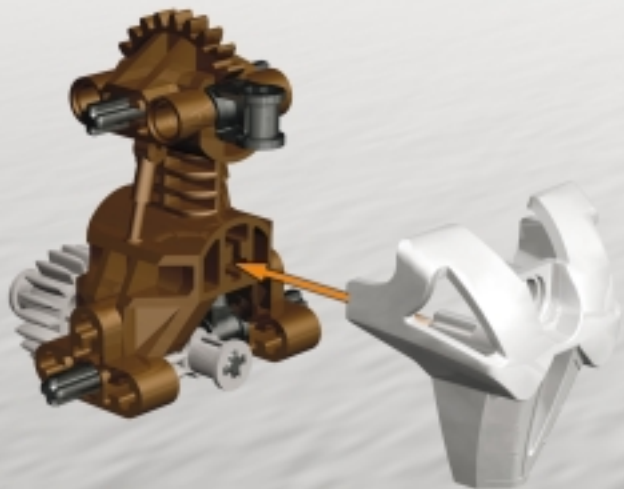


10

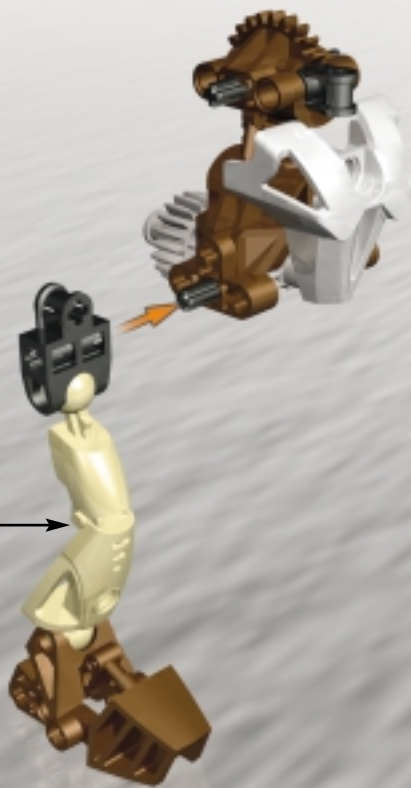

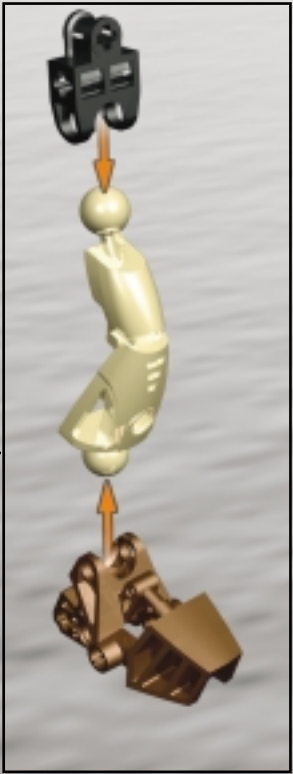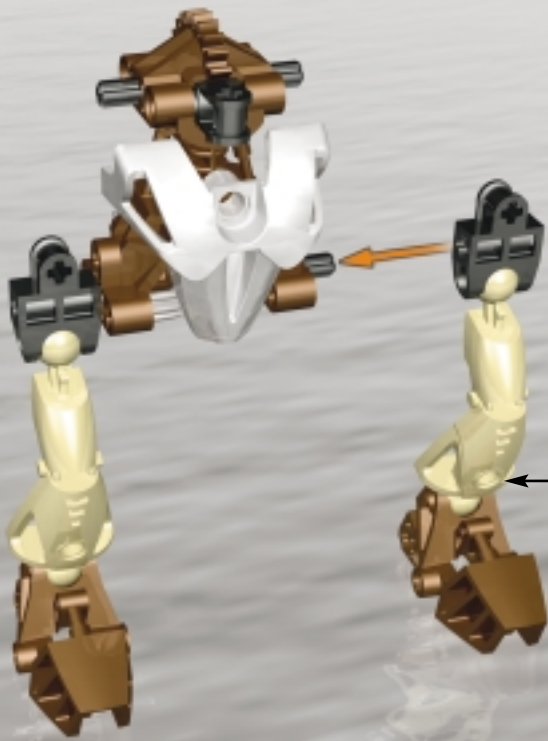


12

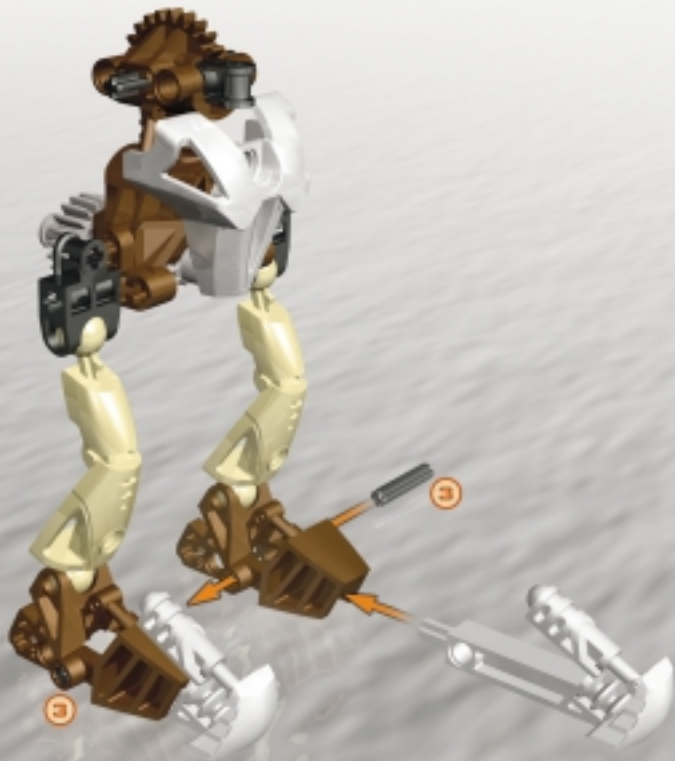


1:1

This inset diagram shows a grey Technic axle with a black pin inserted into one end. An orange circle with the number '3' is positioned above the axle, indicating that three of these components are needed for this step.

13

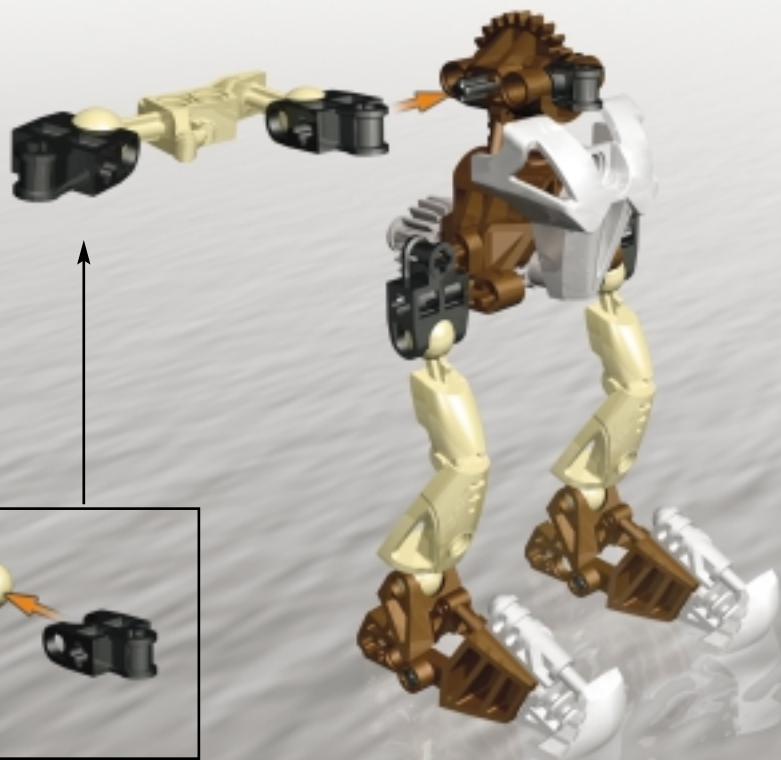



14

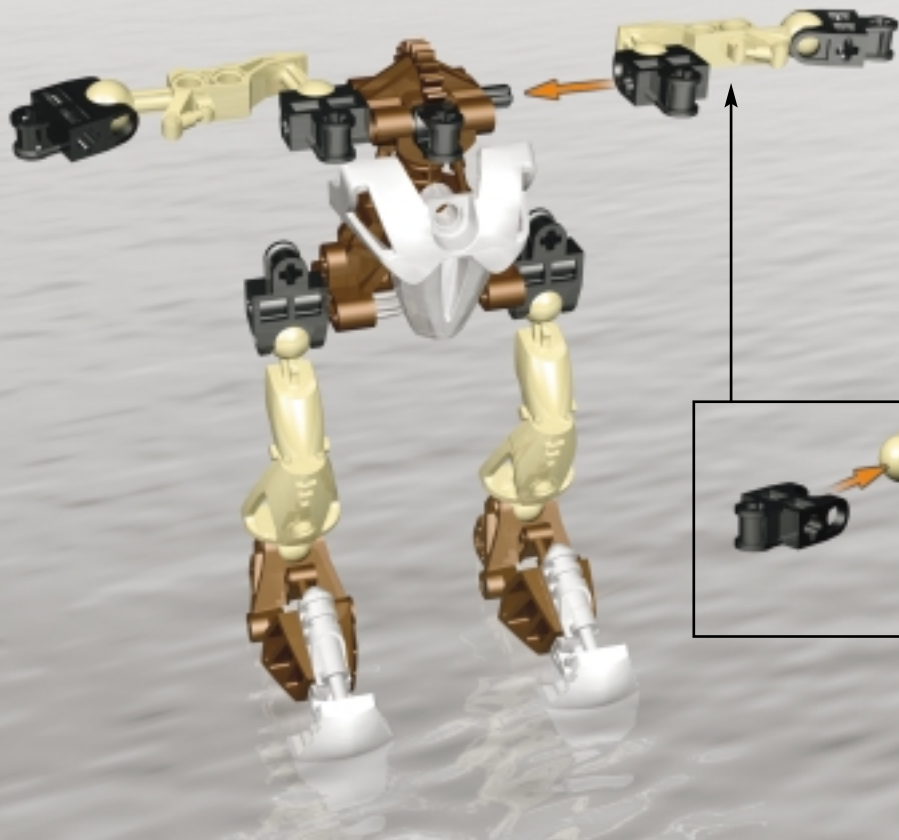

15



16

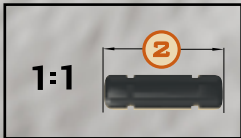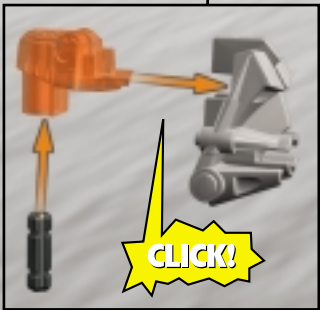


17



18



1

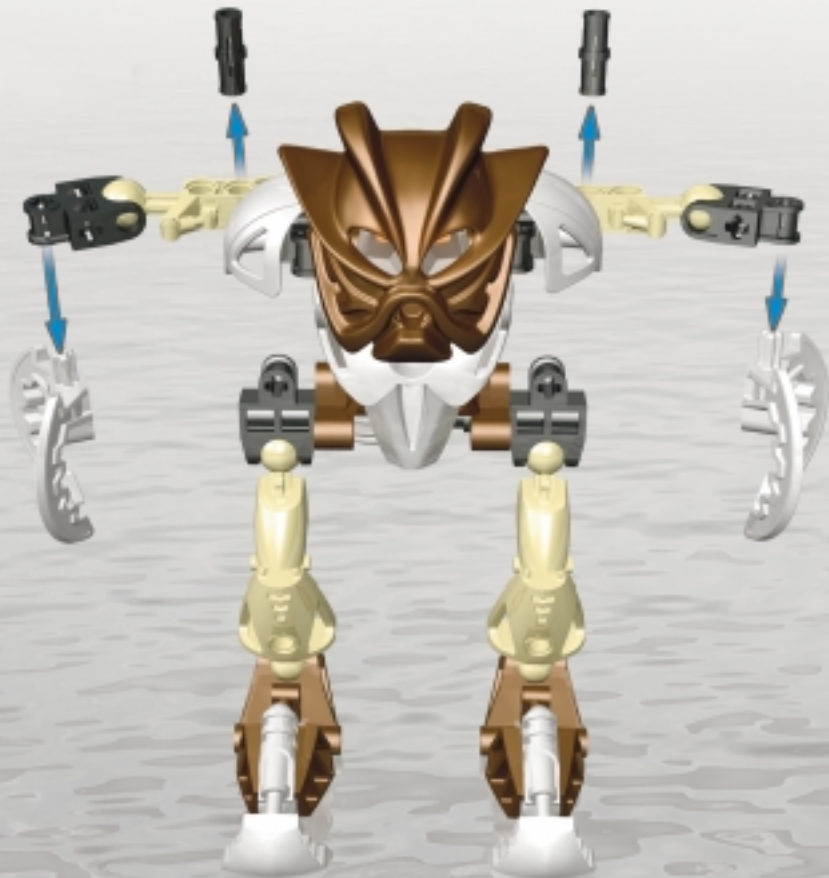

2



1



2



1



2







8566




8568




8572




14

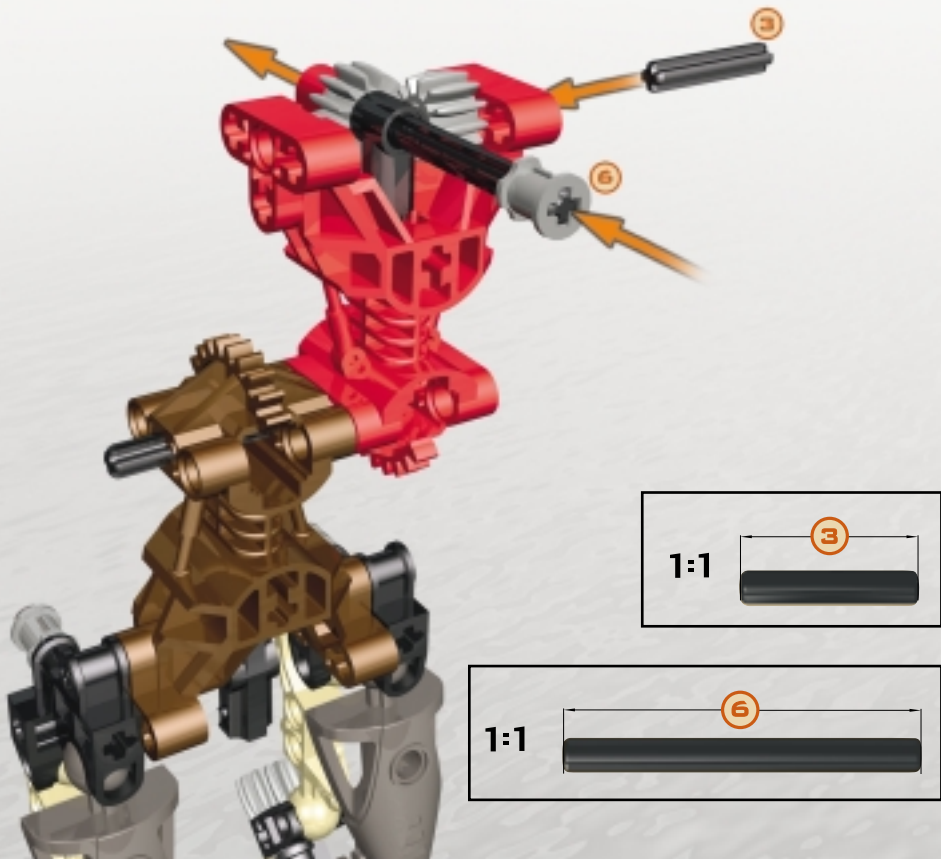

15

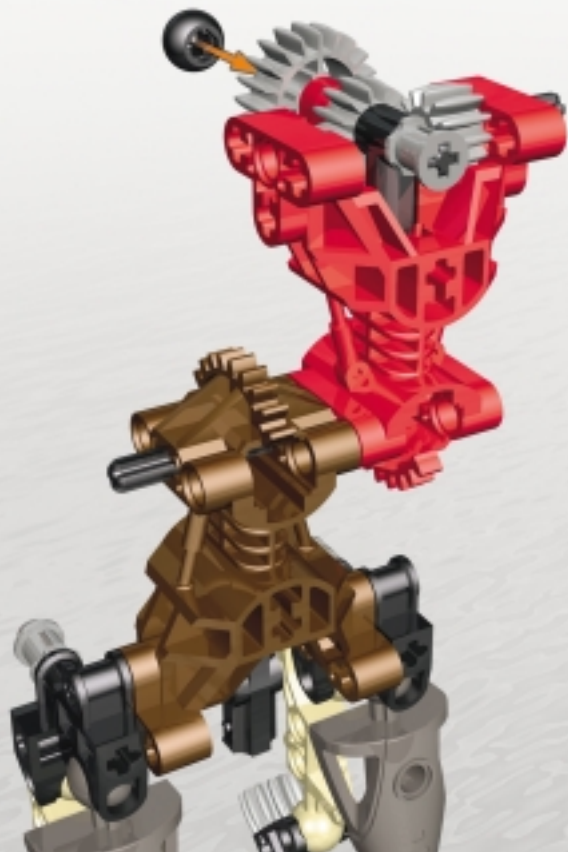


16

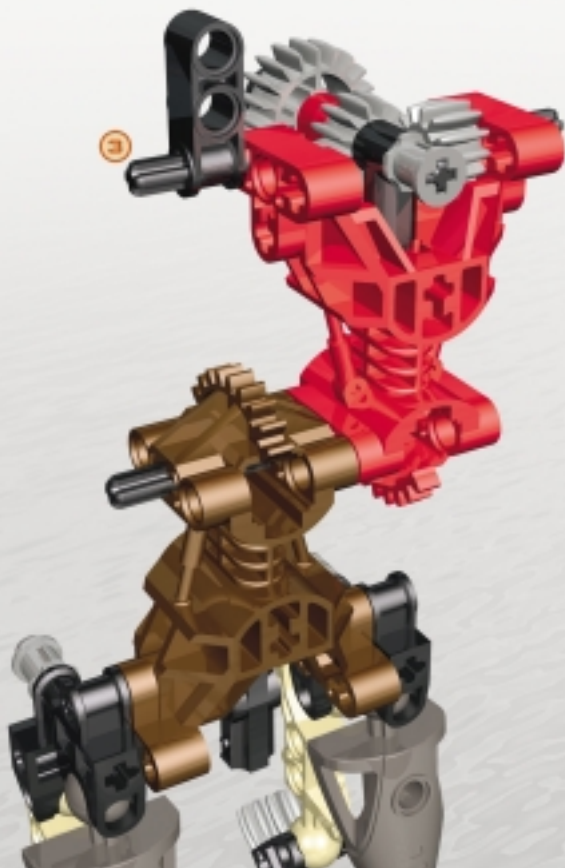

1:1



17

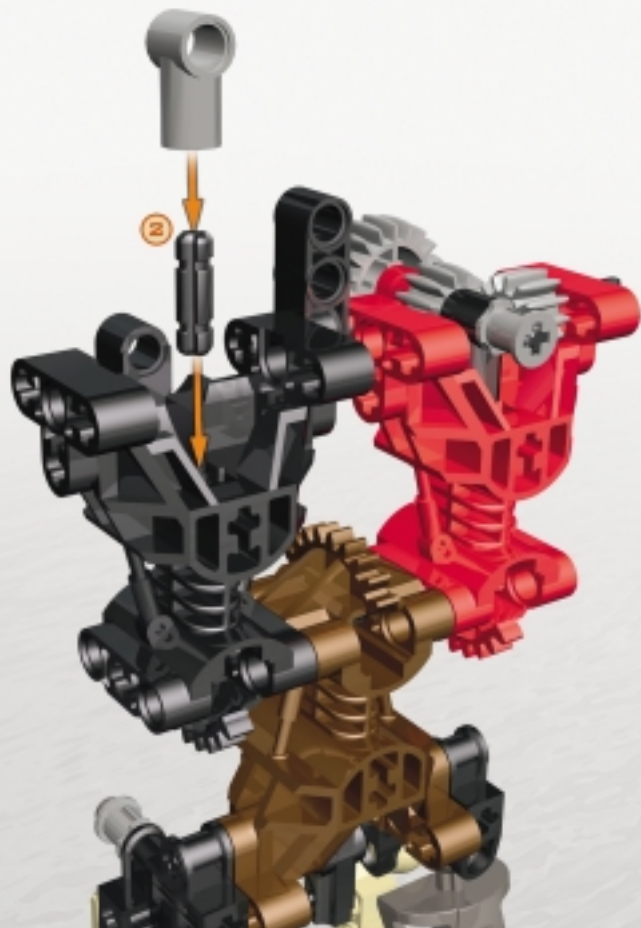

1:1



18




1:1





1:1



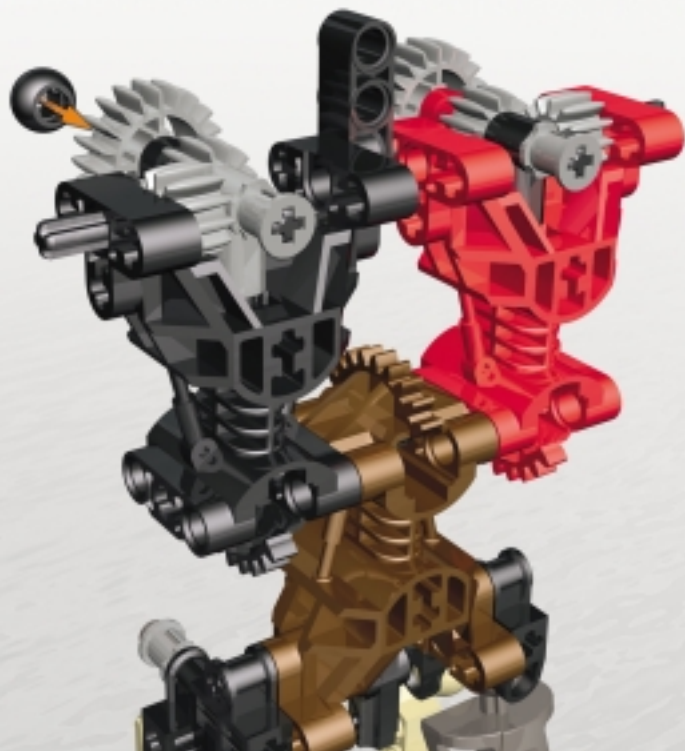

20

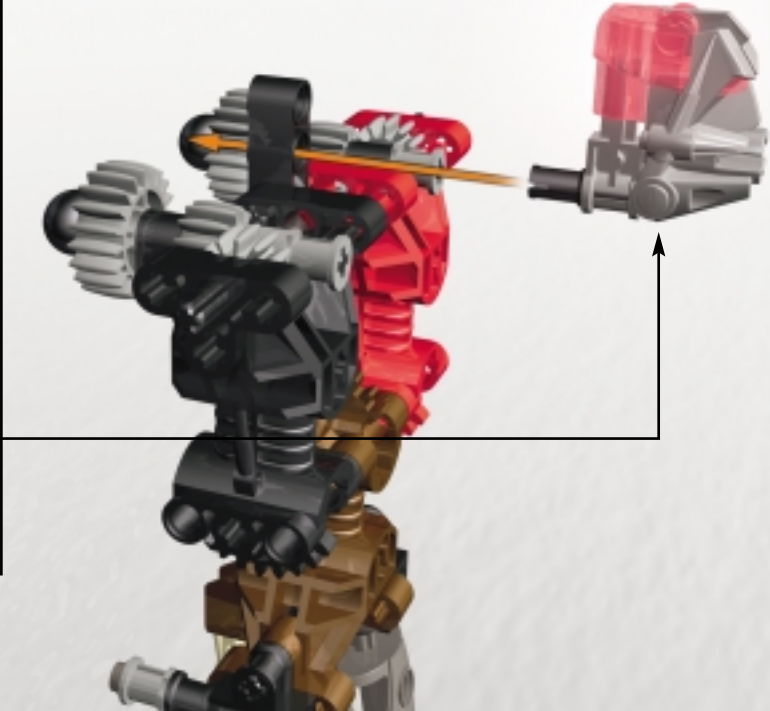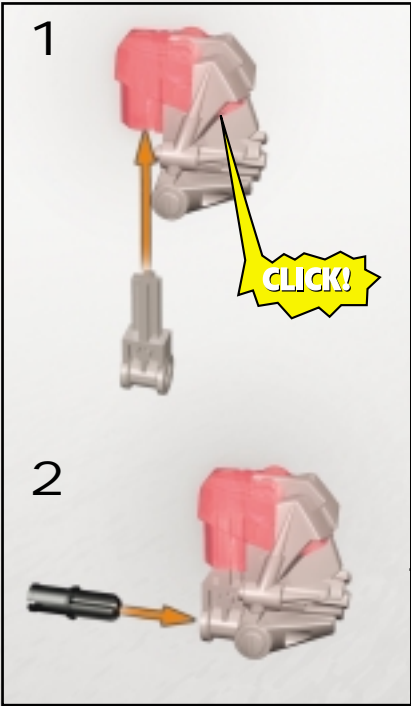

1



2




21




1




2

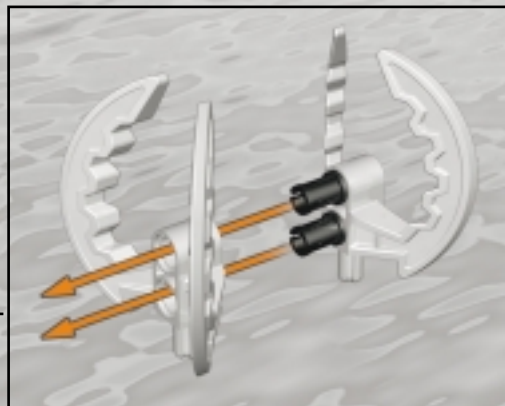

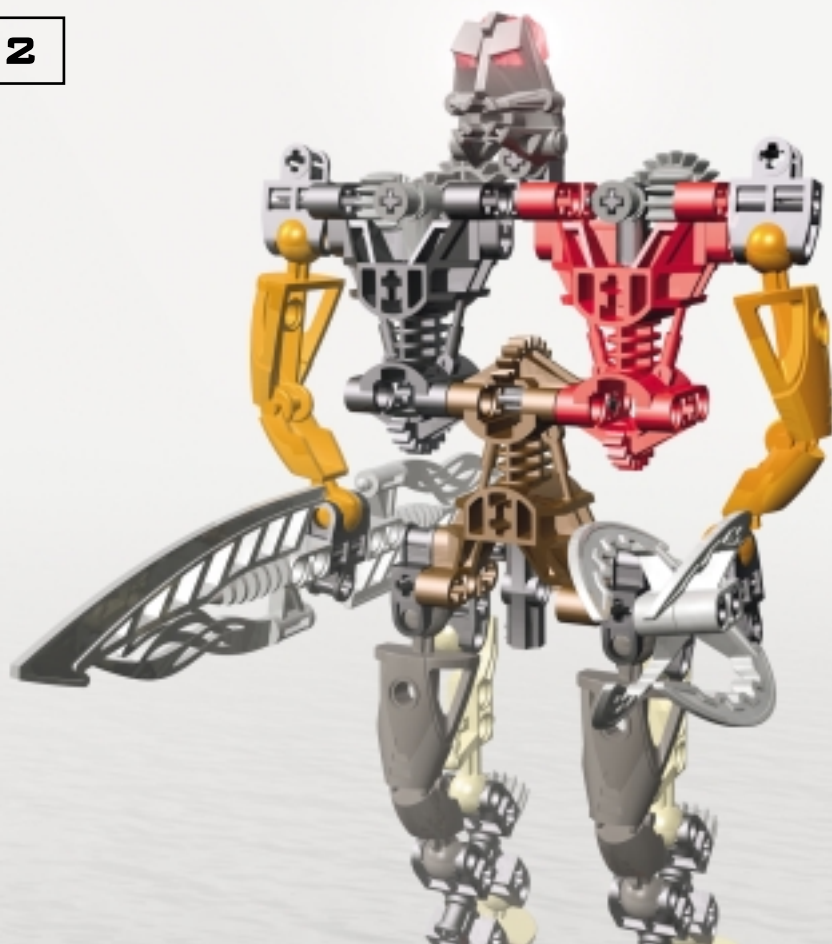

23

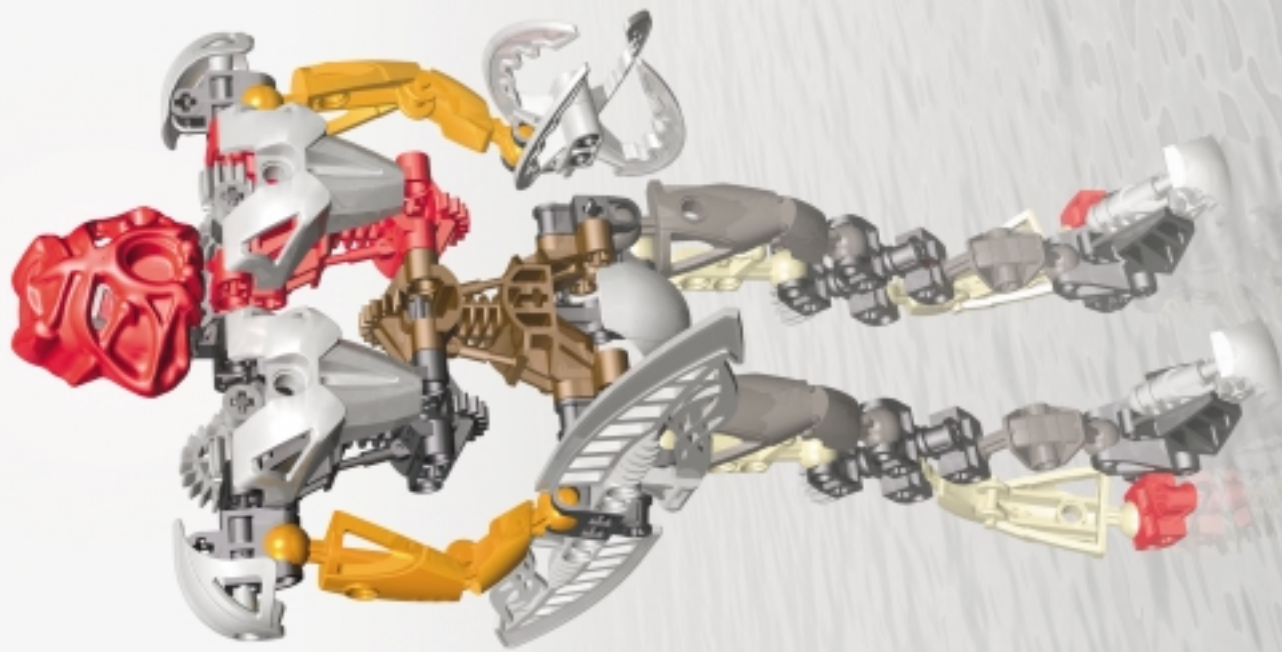



BIONICLE



www.bionicle.com